


Switched / Unswitched Fuse Location

If you're looking for a location to use a switched fuse on the S6/S7, look below:

Switched Location:

Panel B, ST1

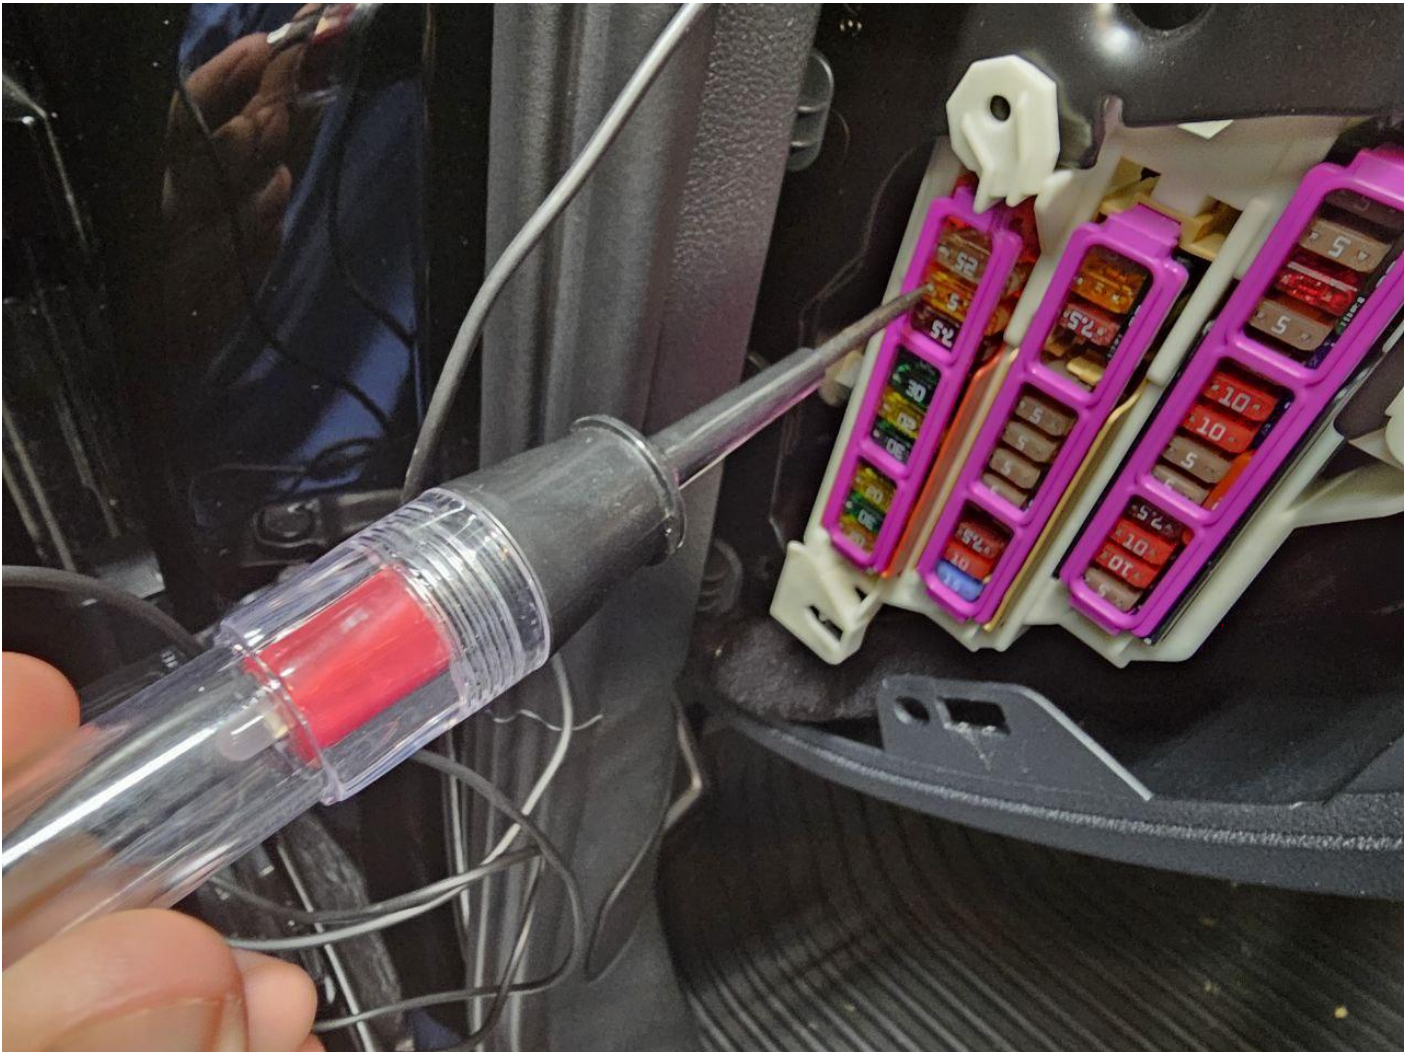


Or top portion of Panel B, ST3



This entire row is switched.

Unswitched Location:

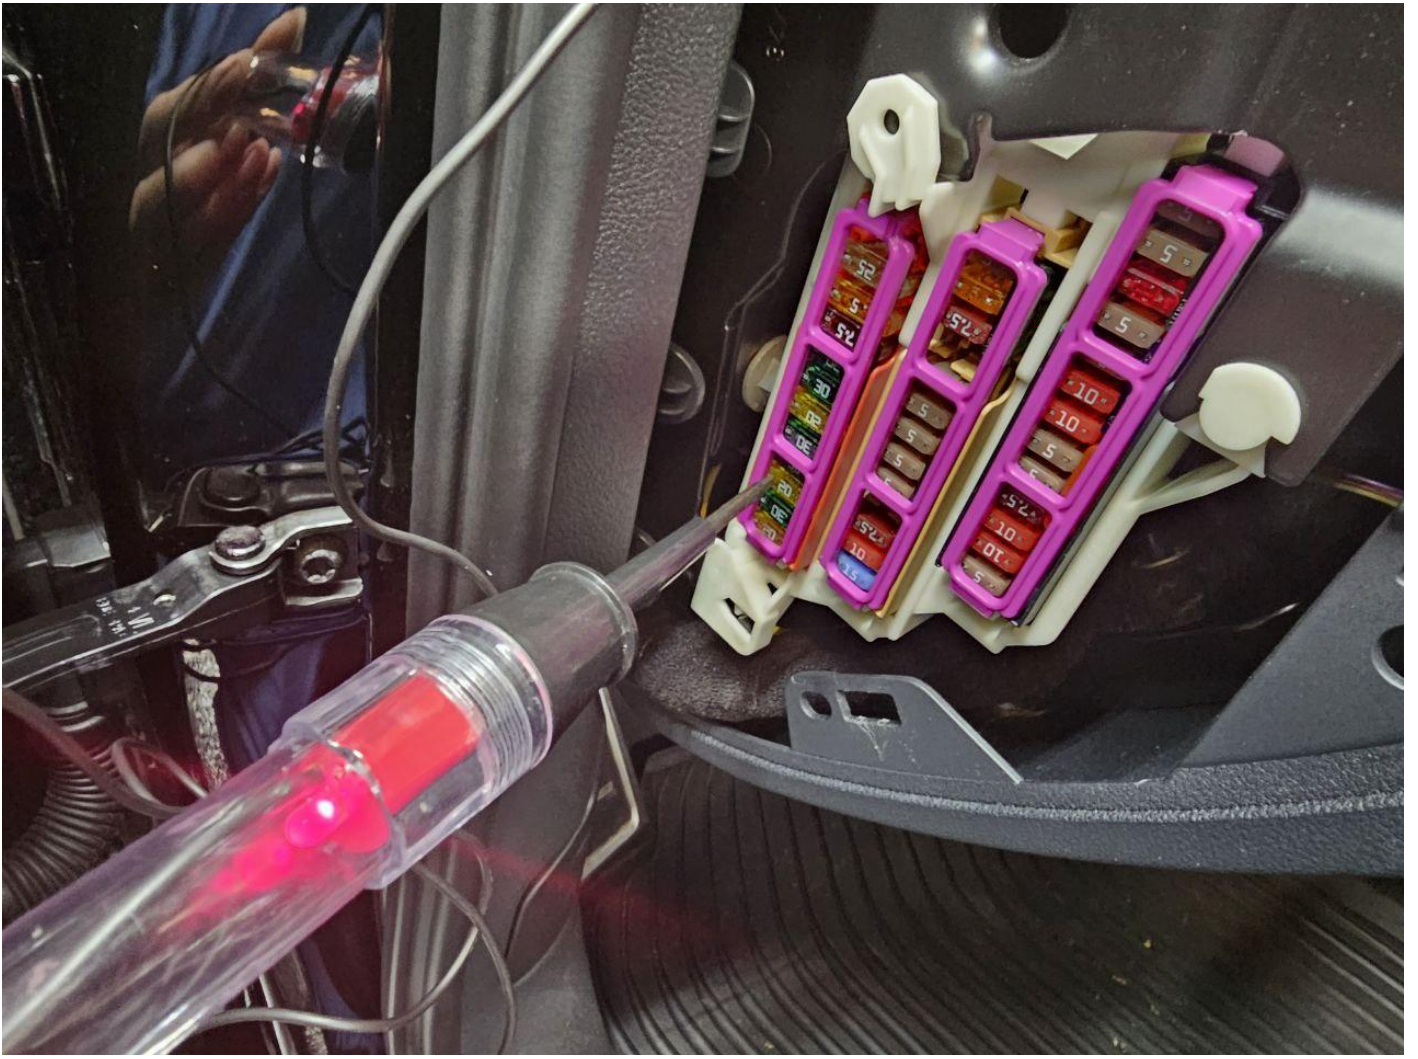



Revision #2

Created 2025-04-01 22:19:07 UTC by Deutsche Auto Garage

Updated 2025-04-01 23:01:53 UTC by Deutsche Auto Garage